



DESIGNED FOR HUMAN PERFORMANCE

## RH MERE0

An RH chair is the perfect work tool, a chair that puts you in an optimal position all day, every day. A few simple adjustments is all it takes to make your RH chair fit your individual anatomy. RH chairs support an upright posture and active sitting, increasing your performance.

Uncompromising ergonomics combined with innovation and design. RH Mereo helps you to achieve an active sitting position, better concentration and better performance. RH Mereo is also perfect for workplaces where several people use the same chair.

### ERGONOMICS

Providing complete support in any working position, enabling you to always sit correctly and breathe properly.

- Sculptured seat with waterfall front, combined with a tapered back featuring clear lumbar support and "Tvedt" cushion encourages movement and an upright posture.
- Uniquely smooth & frictionless movement, paired with intuitive weight adjustment.
- Anyone can adjust the chair to their own personal needs.
- Adjust your chair how you need it without being an ergonomic expert.

### QUALITY

- 10 year guarantee

Flokk is certified in accordance to:

- ISO 9001
- ISO 14001

RH Mereo is certified in accordance to:

- EN 1335-1-2-3 A
- Möbelfakta
- ANSI/BIFMA

### ENVIRONMENT

- Supports companies' environmental profile and credibility (CSR) - Cradle to cradle proof
- Easy to disassemble and no harmful chemicals
- ISO 14025 (EPD)
- GREENGUARD GOLD

### DESIGN

Materials and surfaces communicating comfort and wellbeing through bodyfitting forms. Expressing human performance.

### FIRE CLASSIFICATIONS

Foams and standard fabrics are tested to BS/EN 1021-1&2 (cigarette & match). Foam and fabric according to BS-5852 ignition source 5 (crib 5) can be delivered on request. Please contact our customer service for further information. RH Mereo can be delivered according to CAL TB-133.

### MAINTENANCE

Vacuum clean the chair with a furniture brush or wipe it with a clean cloth or sponge slightly dampened with lukewarm clean water. Do not remove any plastic parts or attempt to open the seating mechanism. Contact your Flokk dealer if the chair requires servicing or maintenance.

See <https://info.flokk.com/global/rh/user-guide> for RH Mereo interactive user instruction guide.



Normal use up to 9 hour/day

# RH MERE0

RH MERE0  
200



RH MERE0  
220



RH MERE0  
300



## MEASUREMENTS

Seat depth with seat slide	403-483 mm	403-483 mm	403-483 mm
Seat depth	465 mm	465 mm	465 mm
Seat width	410 mm	410 mm	410 mm
Seat height - standard gas stem	388-520 mm	388-520 mm	388-520 mm
Seat angle adjustment	+7,7°-16°	+7,7°-16°	+7,7°-16°
Height of lumbar support above the seat	132-210 mm	132-210 mm	132-210 mm
Backrest height	470 mm	630 mm	630 mm
Backrest height adjustment (from seat)	404-482 mm	564-642 mm	564-642 mm
Backrest width	365 mm	365 mm	400 mm
Back angle adjustment	23,7°	23,7°	23,7°
Height of armrest above seat	195-310 mm	195-310 mm	195-310 mm
Distance between armrests	355-510 mm	355-510 mm	355-510 mm
Diameter of base	670 mm	670 mm	670 mm

## OPTIONS

1. Armrest 8T (height and width.), grey or black
2. Base 5T, polished aluminium
3. Base 5T, black black lacquered aluminium
4. Coat Hook Black
5. Coat Hook Silver
6. Coat Hanger, Black
7. Coat Hanger, Silver
8. Castors for hard floors
9. Neckrest

## GAS STEMS

- 4T NPR (standard) Silver or Black approx. 410-550 mm  
 4T Silver or Black approx. 388-520 mm  
 B Silver or Black approx. 480-610 mm  
 A Silver or Black approx. 495-620 mm

For other options see the RH Price List.

The design and specifications of RHs' products are developed on an ongoing basis and the above formulations should not be perceived as completely final.